


QUICK START GUIDE

HARDTAPE CARTRIDGE



Your HardTape Cartridge requires a HardTape Cable or Bay Interface Kit to operate.

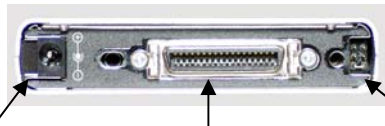

5VDC Data / Power Master/Slave

- The Interface cable carries both data and power.
- Connection of the 5VDC jack is not usually required when using the Interface cable.
- The master/slave jumper block is set correctly for cable and bay uses and will not need to be adjusted.
- Refer to your Interface Kit Quick Start Guide for connection, installation and operating instructions.

Option 1

HardTape Bay Interface Kits



USB 2.0



PATA / IDE



SCSI

50-Pin Narrow
68-Pin Wide

Option 2

USB Interface Kit



Option 3

FireWire Interface Kit



1430 Tully Road, Suite 416
San Jose, CA 95122
Phone: 408-947-8300
Fax: 408-947-8333
Email: info@audavi.com

WWW.AUDAVI.COM

©COPYRIGHT 2002-2008 AUDAVI CORPORATION.
ALL BRAND AND PRODUCT NAMES ARE REGISTERED TRADEMARKS
OF THEIR RESPECTIVE OWNERS.

87053011F